



Kit de connecteurs pour Solio Classic et Solio Hybrid 1000 :

Nokia (406-S1-NKT)

E60, E70, 1100, 1101, 1110, 1221, 1260, 1261, 1600 2260, 2270, 2285, 2300, 2600, 2650, 2652, 3100, 3105, 3108, 3120, 3200, 3220, 3230, 3285, 3300, 3350, 3360, 3361, 3390, 3395, 3510, 3510i, 3520, 3530, 3560, 3570, 3585, 3585i, 3586, 3586i, 3588i, 3589i, 3590, 3595, 3600, 3620, 3650, 3660, 5100, 5140, 5140i, 5210, 5510, 6020, 6021, 6030, 6060, 6100, 6108, 6170, 6200, 6220, 6225, 6230, 6230i, 6260, 6310, 6310i, 6340, 6340i, 6360, 6370, 6385, 6510, 6560, 6585, 6590, 6590i, 6600, 6610, 6610i, 6620, 6630, 6650, 6670, 6680, 6681, 6800, 6810, 6820, 6822, 7200, 7210, 7250, 7250i, 7260, 7270, 7280, 7380, 7600, 7650, 7700, 7710, 7600, 7610, 7650, 8260, 8265, 8265i, 8270, 8290, 8310, 8390, 8800, 8910, 8910i phones, 9210i, 9290, 9300, 9300i, 9500 Communicators, N-Gage, N-Gage QD

Motorola (409-S1-MRT)

A630, A830, A835, A920, A925, A1000, C331 and C332 (TDMA versions), C333 (CDMA with antenna), C341, C343, C353 (TDMA), C975, E310, E550, E1000, MPx220, ROKR, T280i, T300p, T720, T720i, T721, T721i, T722i, T730, T731, V70, V260, V262, V265, V300, V400, V500, V505, V525, V545, V547, V550, V551, V600, V620, V635, V710, V810, V975, V1050, V60, V60i, V60c, V60p(PTT), V60s, V60t, V60t Color, V60g, V60x, V66, V66i, V120c, 120t, 120x, 120c, 120e, 270c, 280, V200 Personal Communicator

Samsung (407-S1-SST)

SCH-A210, SCH-A310, SCH-A399, SCH-A475, SCH-A505, SCH-A509, SCH-A539, SCH-A563, SCH-A564, SCH-A591, SCH-A592, SCH-A595, SCH-A599, SCH-A610, SCH-A809, SCH-N181, SCH-N181, SCH-N182, SCH-N191, SCH-N195, SCH-N288, SCH-N370, SCH-N375, SCH-X199, SCH-X209, SCH-X309, SCH-X319, SCH-X359, SGH-A200, SGH-A288, SGH-A300, SGH-A308, SGH-A400, SGH-A408, SGH-A500, SGH A561, SGH-A608, SGH-A800, SGH-C100, SGH-D100, SGH_D500, SGH_D600, SGH-E100, SGH_E330, SGH_E350, SGH-E400, SGH_E600, SGH_E700, SGH_E710, SGH_E760, SGH_E800, SGH-K528, SGH-N200, SGH-N400, SGH-N500, SGH-N620, SGH-N628, SGH-P400, SGH-P408, SGH_P510, SGH-Q100, SGH-Q200, SGH-Q208, SGH-Q300, SGH-R200, SGH-R208, SGH-R210, SGH-R210S, SGH R220, SGH-R225, SGH-R225M, SGH-S100, SGH-S200, SGH-S208, SGH-S300, SGH-S300M, SGH-S307, SGH-S308, SGH S500, SGH-T100, SGH-T108, SGH-T200, SGH-T208, SGH-T410, SGH-T400, SGH-T408, SGH-T500, SGH-V100, SGH-V200, SGH-V205, SGH-V206, SGH-X100, SGH-X450, SGH-X460, SGH-X480, SGH-X600, SGH-X640, SPH-T100

Sony Ericsson (408-S1-SET)

A2218z, A2618, A2618s, A2628, A3618s, F500i, J210i, J300i, K300i, K500i, K508i, K600i, K608i, K700i, P800, P900, P910i, R300d, R300LX, R300z, R320, R320s, R380 WORLD, R380e, R380s, R520m, R600, S700i, T20e, T20s, T28 WORLD, T28z, T29, T29s, T39m, T60c, T60d, T61c, T61d, T61LX, T61z, T62u, T65, T66, T68, T68i, T100, T105, T200, T226, T230, T290i, T300, T306, T310, T316, T600, T610, T616, T620, T630, V600i, V800, Z200, Z300i, Z600, Z800i, Z1010

Siemens (412-S1-SMT)

A51, A52, A53, A55, A57, A60, A62, A65, A70, A75, AL21, AL72, AL75, AL76, AX21, AX72, AX75, AX76, C55, C60, C62, C65, C70, C72, C75, CC55, CC60, CC62, CC65, CC70, CC72, CC75, CF62, CF75, CF110, CFX65, CL75, CX65, CX70, CX75, M55, M60, M65, M75, MC55, MC60, MC65, MC75, ME75, S55, S65, S75, SP55, SP65, SP75, SF65, SK65, SL55, SL65, SL75, SG75, SXG75, SX1